

MAXIMUS-3

JK/JL WRANGLER

NATO JERRY CAN HOLDER

(For Maximus-3 Tire Carrier)

PART #: UN2010SN

THIS PRODUCT IS NOT COMPATIBLE WITH MAXIMUS-3 HI-LIFT JACK MOUNT.

PLEASE MAKE SURE YOU READ AND UNDERSTAND THE ENTIRE INSTALLATION GUIDE BEFORE YOU START. WE EXPECT YOU TO HAVE BASIC MECHANICAL ABILITIES TO PERFORM THIS INSTALLATION.

WE RECOMMEND THAT YOU SEPARATE AND IDENTIFY ALL THE PARTS AND HARDWARE KITS YOU RECEIVED WITH YOUR SHIPMENT BEFORE YOU PROCEED TO DISASSEMBLE YOUR BUMPER.

Parts List:


Bottom/base Bracket
Top Cradle Bracket
M8 x 16 Button Socket - Stainless
8mm x 15 Washer - Stainless

Qty

1
1
4
4

Tools Required

- ✓ Your Basic Hand Tools
- ✓ Metric Allen Key # 5

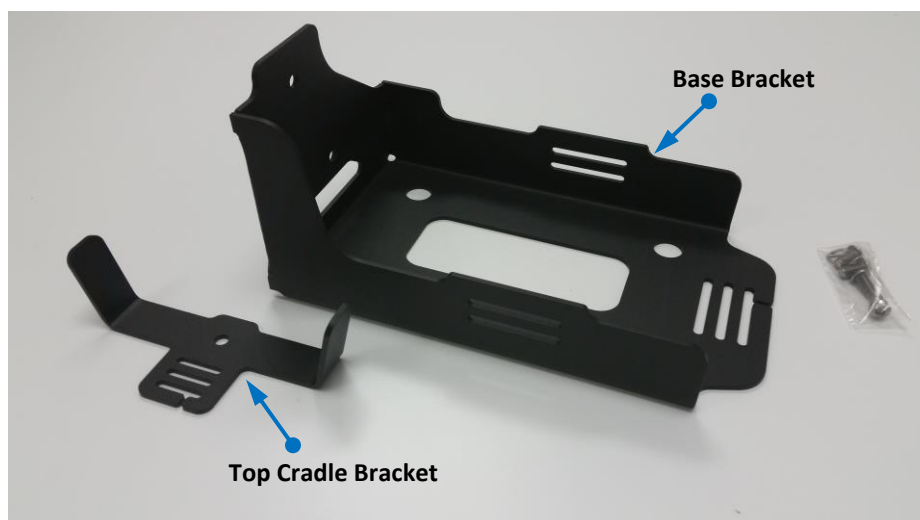

IMPORTANT


Follow these instructions precisely. Maximus-3 is not liable for any damage caused by improperly installed products. It is the purchaser's responsibility to ensure both the installation and maintenance are performed properly as set forth in this guide. We recommend using anti-size paste on all non-thread lock bolts.

INSTALLATION STEPS

Estimated Install Time: 30 minutes

INSTALL AS SHOWN IN THE PICTURES BELOW:

1. Using the M8 bolts and washers provided bolt the bottom/base and top cradle Brackets to your Maximus-3 Tire Carrier as shown below. 3 bolts at the bottom, 1 bolt at the top.
2. Weave your strap through the cutout slots in the bottom and top brackets as shown below (remove hooks from the ends of your strap, also you may need to cut the strap shorter to length to reduce excess).
3. Install your Jerry Can as shown below. Make sure that Nato Jerry Can is secured before driving.

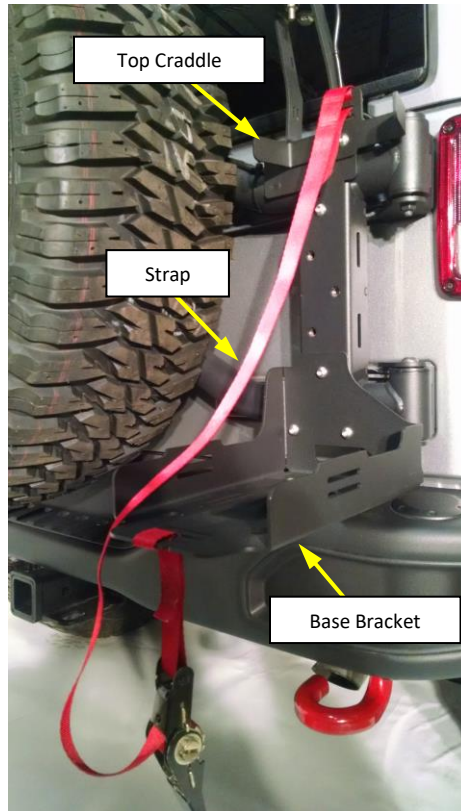

Your installation is complete. If you have questions regarding this installation, please contact us at customerservice@maximus-3.com, or call 248-6061745