

# MAXIMUS-3



JK, 10A/X & HARD ROCK RUBICON

## FRONT END CAPS FOR STUBBY BUMPER

SKU: HR1029FC

### INSTALLATION GUIDES

PLEASE MAKE SURE YOU READ AND UNDERSTAND THE ENTIRE INSTALLATION GUIDE BEFORE YOU START. WE EXPECT YOU TO HAVE BASIC MECHANICAL ABILITIES TO PERFORM THIS INSTALLATION.

WE RECOMMEND THAT YOU SEPARATE AND IDENTIFY ALL THE PARTS AND HARDWARE KITS YOU RECEIVED WITH YOUR SHIPMENT BEFORE YOU PROCEED TO DISASSEMBLE YOUR BUMPER.

#### Component List:

#### Qty

Front End Caps L/R

2

#### Tools Required:



T 50 Torx bit and ratchet

### INSTALL AS SHOWN BELOW:

Using T50 torx bit, remove factory bolts/screws.

Remove the U-clip nut from the bottom tab.

Align your Maximus-3 end caps and install using factory m10 torx screws as shown. Note the plate goes behind the bottom tab.

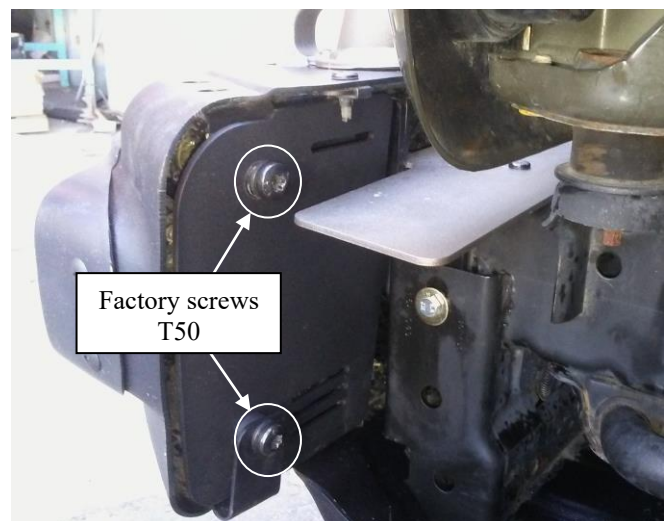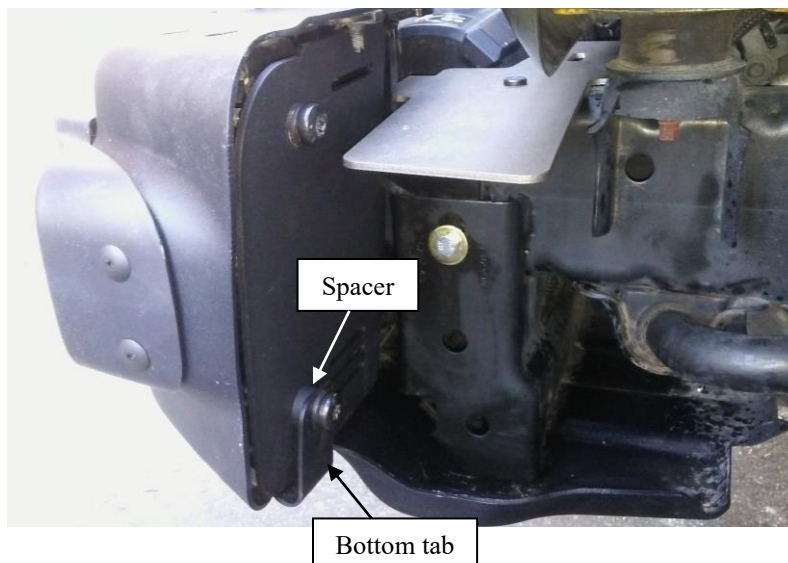

Your installation is complete. If you have questions regarding this installation, please contact us at [info@maximus-3.com](mailto:info@maximus-3.com) or call 248 821 6654.