

# MAXIMUS-3



10A/X & HARD ROCK RUBICON

## REAR BUMPER END CAPS

*(For use with flat fenders and/or stubby bumper configuration)*

SKU: HR1031RC

### INSTALLATION GUIDES

PLEASE MAKE SURE YOU READ AND UNDERSTAND THE ENTIRE INSTALLATION GUIDE BEFORE YOU START. WE EXPECT YOU TO HAVE BASIC MECHANICAL ABILITIES TO PERFORM THIS INSTALLATION.

WE RECOMMEND THAT YOU SEPARATE AND IDENTIFY ALL THE PARTS AND HARDWARE KITS YOU RECEIVED WITH YOUR SHIPMENT BEFORE YOU PROCEED TO DISASSEMBLE YOUR BUMPER.

#### Component List:

Maximus-3 Rear Bumper End Caps L & R




#### Tools Required:

10MM & 16MM sockets and ratchet

### INSTALLATION STEPS:


#### **(A)- REMOVE THE FACTORY BUMPER END CAPS**

Using 10MM socket and ratchet unbolt 3 bolts from the back side of bumper and remove the factory end caps. Keep the bolts as you will need them to install your new Maximus-3 end caps.

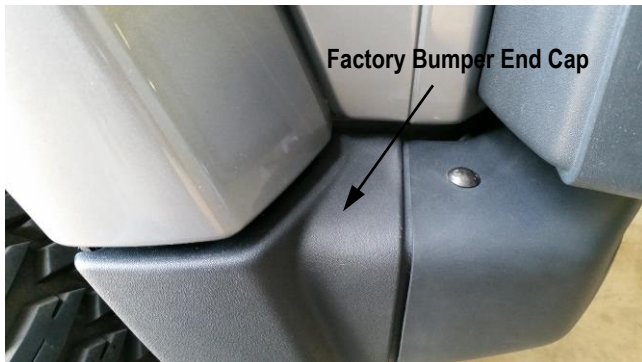

### **(B)- REMOVE THE BUMPER BRACE BRACKET BOLTS**

Using 16 MM socket and ratchet remove the two bracket bolts shown in the picture below. Keep the bolts as you will need them to install your end caps. Loosen the other two bumper bracket bolts from the chassis frame, but do not remove - just loose enough to insert the end cap between.

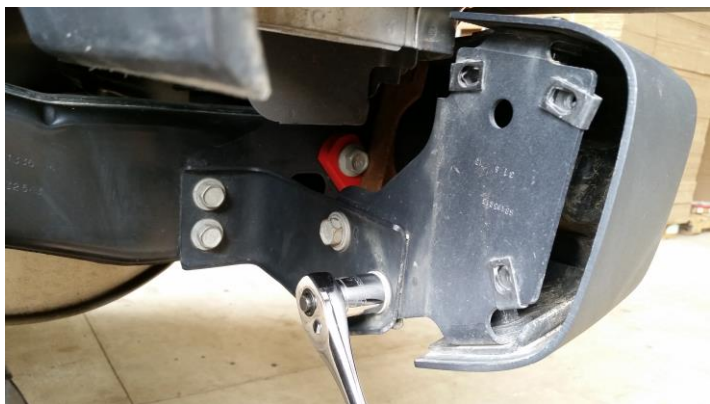

### **(C)- INSTALL YOUR MAXIMUS-3 BUMPER END CAPS**

Insert your Maximus-3 end cap between the bumper brackets and align bolting holes.

Using the factory bolts you removed in step (A) and (B), align your end cap and put all the bolts in by hand, just snug.



Align the position of your end cap to the bumper and tighten the three 6 MM bolts.

Adjust the bumper bracket on the chassis and tighten the two bolts you left loose in step (B).

Finally tighten the remaining two bumper bracket bolts.



Repeat the same on the other side.

Your installation is complete. If you have questions regarding this installation, please contact us at [info@maximus-3.com](mailto:info@maximus-3.com) or call 248 821 6654.