

MAXIMUS-3



JL/JT WRANGLER

SIDE-SHOOTER CUBE LIGHT BRACKETS

PART #: JL6003CL

INSTALLATION GUIDES

Installation Time: 30 Minutes

Difficulty Level: Easy

PLEASE MAKE SURE YOU READ AND UNDERSTAND THE ENTIRE INSTALLATION GUIDE BEFORE YOU START. WE EXPECT YOU TO HAVE BASIC MECHANICAL ABILITIES TO PERFORM THIS INSTALLATION.

WE RECOMMEND THAT YOU SEPARATE AND IDENTIFY ALL THE PARTS AND HARDWARE KITS YOU RECEIVED WITH YOUR SHIPMENT BEFORE YOU PROCEED.



IMPORTANT

Follow these instructions precisely. Maximus-3 is not liable for any damage caused by improperly installed products. It is the purchaser's responsibility to ensure both the installation and maintenance are performed properly as set forth in this guide. We recommend using anti-seize paste on all non-thread lock bolts.

Parts List:

Cube Light Brackets Set

Qty


1

Rubber Washer/Isolators

4

Tools Required:

- ✓ Basic hand tools
- ✓ M10 Metric socket/wrench

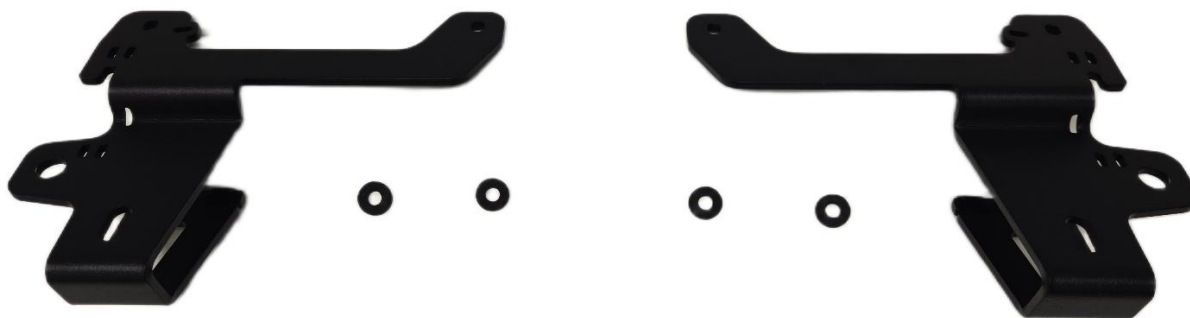

INSTALLATION STEPS

1. Using M10 wrench/socket, remove the 2 factory fender bolts pointed with arrows in the picture below.
 2. Place Rubber Isolator washers over the mounting holes on the Jeep.
 3. Align your Maximus-3 Light Bracket to the holes and Rubber Isolator Washers and bolt down using the factory bolts as shown below.
- Note: Rubber Isolator Washers go between the bracket and the body.
4. Bolt your Lights to the bracket as shown and route the wiring under the bracket and under the hood as desired.
 5. Connect your lights to your Auxiliary Accessories wiring or wire following the wiring instructions supplied with your lights. Use cable tie loops to secure the wire to the bracket.



6. Repeat on the other side.

Your installation is complete. If you have questions regarding this installation, please contact us at sales@maximus-3.com or call 248-821-6654.