

MAXIMUS-3



JK, 10A/X & HARD ROCK RUBICON

FRONT BUMPER END CAPS

(For use with full width bumper configuration)

SKU: HR1030FC

INSTALLATION GUIDES

PLEASE MAKE SURE YOU READ AND UNDERSTAND THE ENTIRE INSTALLATION GUIDE BEFORE YOU START. WE EXPECT YOU TO HAVE BASIC MECHANICAL ABILITIES TO PERFORM THIS INSTALLATION.

WE RECOMMEND THAT YOU SEPARATE AND IDENTIFY ALL THE PARTS AND HARDWARE KITS YOU RECEIVED WITH YOUR SHIPMENT BEFORE YOU PROCEED TO DISASSEMBLE YOUR BUMPER.

Component List:

Qty

Front End Caps L/R

2



Tools Required:

T 50 Torx bit and ratchet

INSTALL AS SHOWN BELOW:

Using T50 torx bit, remove factory bolts/screws.

Align your Maximus-3 end caps and install using factory m10 torx screws as shown.

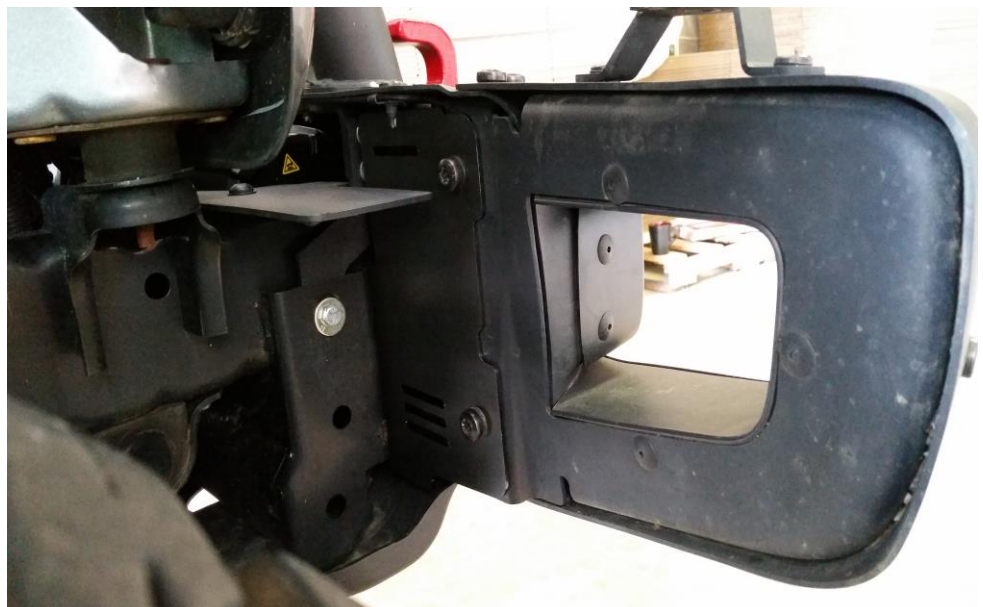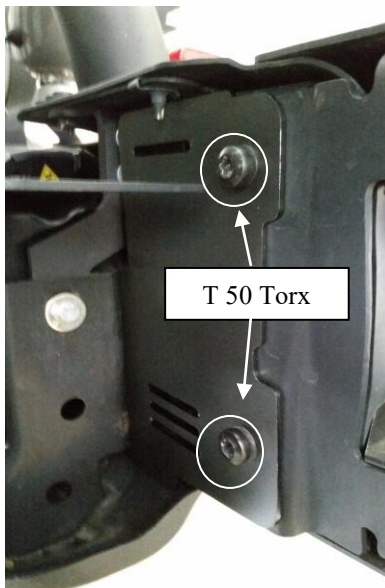

Your installation is complete. If you have questions regarding this installation, please contact us at info@maximus-3.com or call 248 821 6654.