

MAXIMUS-3



JK WRANGLER

FRONT LICENSE PLATE BRACKET

(Fits JK Wrangler with OEM Factory Hard Rock Steel Bumper)

Stealth & Low Mount License Plate Bracket


PART #: HR1017LL, HR1045LS

INSTALLATION STEPS

Estimated Install Time: 15 Minutes

PLEASE MAKE SURE YOU READ AND UNDERSTAND THE ENTIRE INSTALLATION GUIDE BEFORE YOU START. WE EXPECT YOU TO HAVE BASIC MECHANICAL ABILITIES TO PERFORM THIS INSTALLATION.

WE RECOMMEND THAT YOU SEPARATE AND IDENTIFY ALL THE PARTS AND HARDWARE KITS YOU RECEIVED WITH YOUR SHIPMENT BEFORE YOU PROCEED.

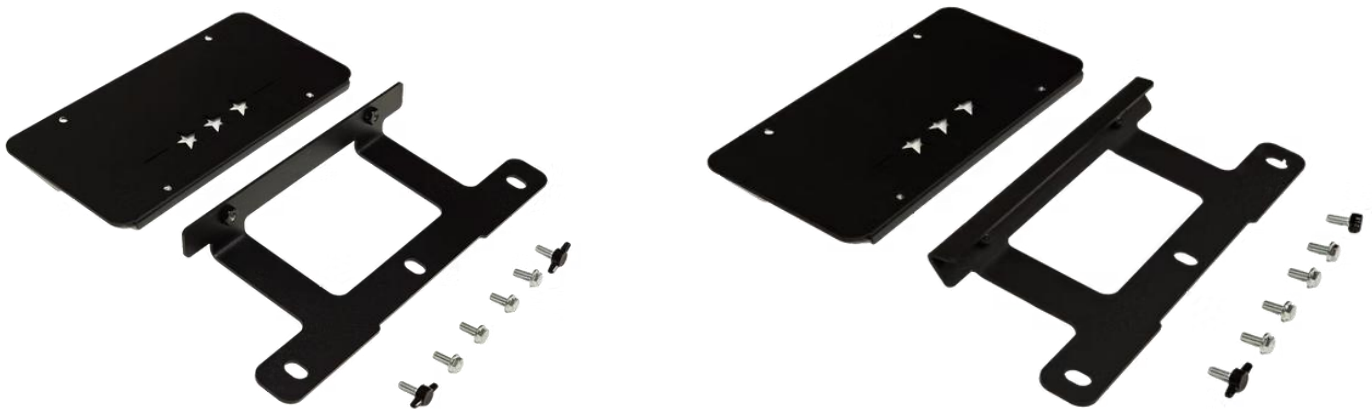

IMPORTANT

Follow these instructions precisely. Maximus-3 is not liable for any damage caused by improperly installed products. It is the purchaser's responsibility to ensure both the installation and maintenance are performed properly as set forth in this guide. We recommend using anti-size paste on all non-thread lock bolts.

Component List:


License Plate Bracket	1
License Plate Frame	1
M6 Hex Bolts	4
M6 Thumb Screws	2

Tools Required:

Metric Sockets/Wrenches
Your Basic Hand Tools

INSTALLATION STEPS

- 1- Using a 15 MM socket/wrench remove the front 3 factory bolts from the skid plate.
- 2- Align your Maximus-3 license plate bracket to the corresponding holes on the bumper and bolt it up using the same factory bolts. Refer to picture below.
- 3- Using 10MM socket pre-assemble your license plate to the Maximus-3 license plate Aluminum frame/plate using the M6 screws provided.
- 4- Using the provided thumb screws or the remaining M6 bolts mount your license plate and frame assembly to the bracket you bolted to the bumper in step 1.

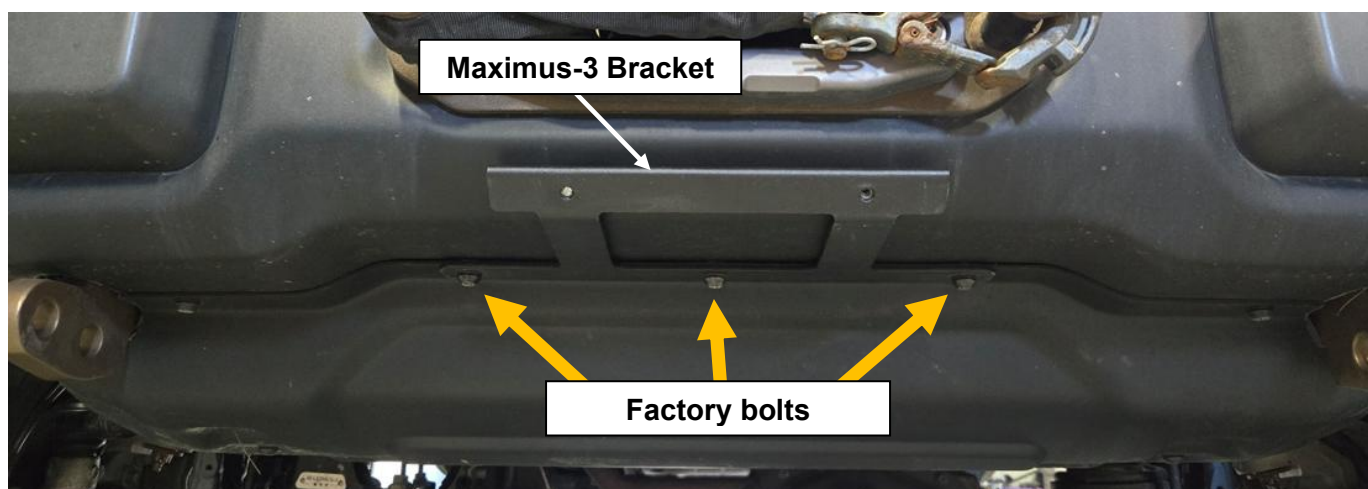

STEALTH



LOW MOUNT

Your installation is complete. If you have questions regarding this installation, please contact us at customerservice@maximus-3.com, or call 248-6061745